

# David Lectern





Type: Miscellaneous

Place: Sanctuary. / General.



Tools: MiterSaw. / HandSaw.

Material Profile: 2x4 Beam.

All of the measurements are presented in millimeters.

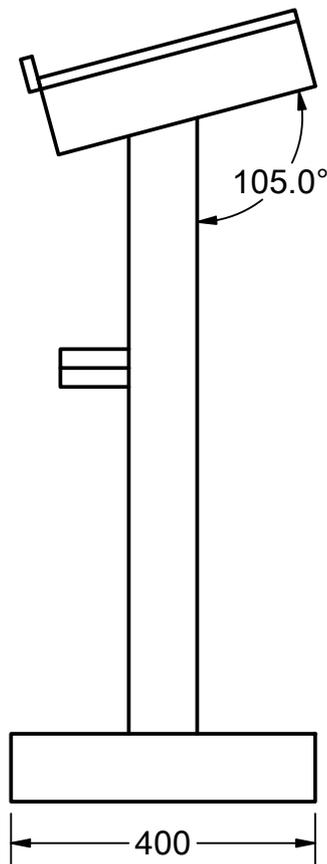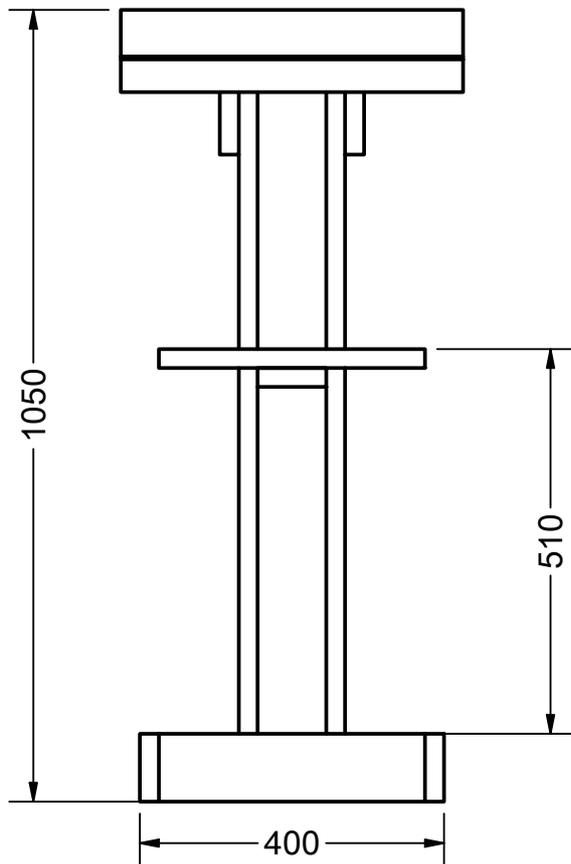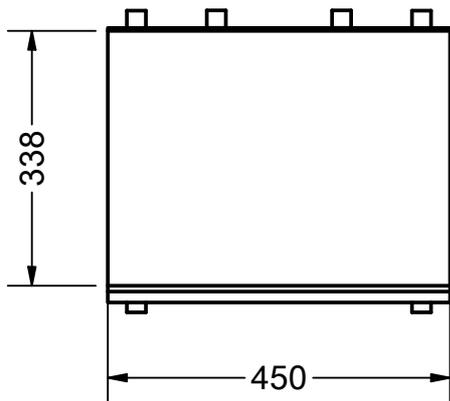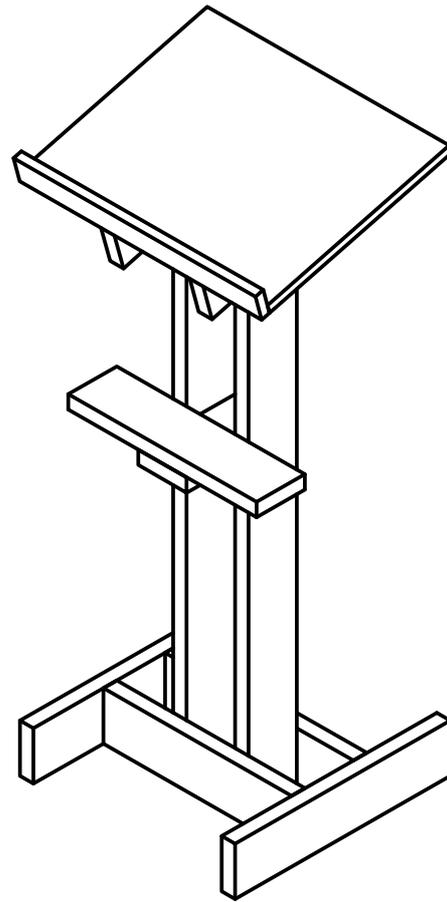


# Material Profile

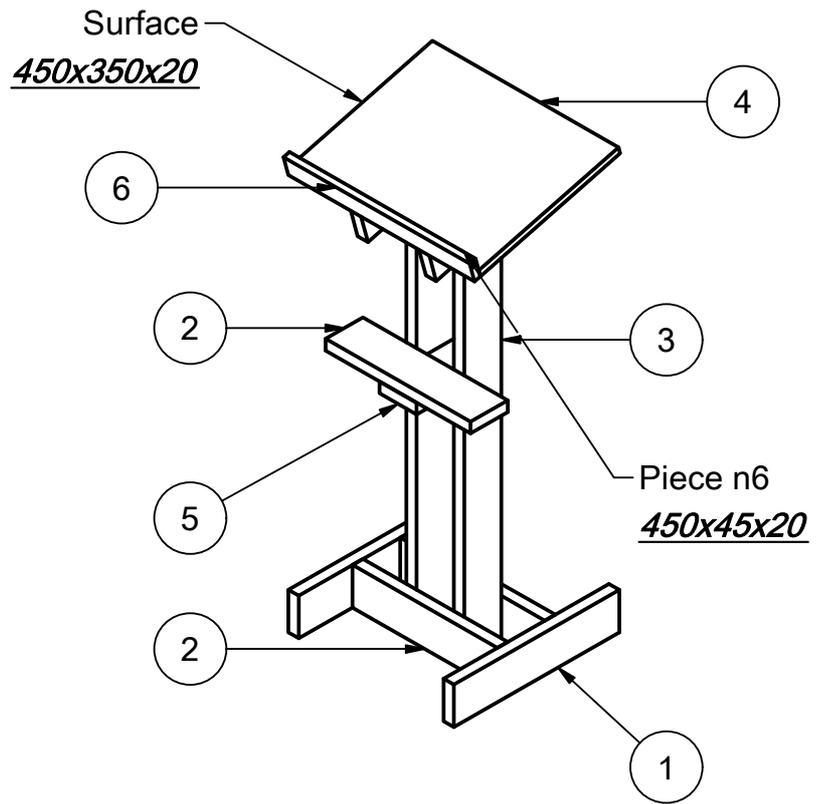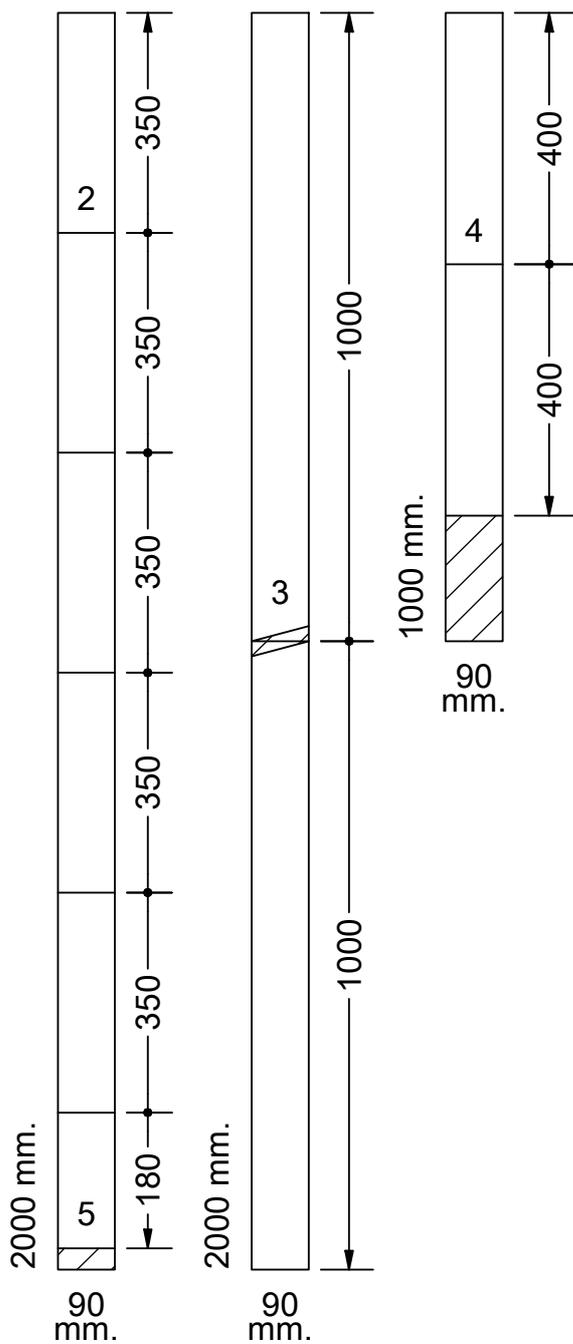

## Recommended Material

Dimensions can change when the thickness of the material changes. Adapt to need.

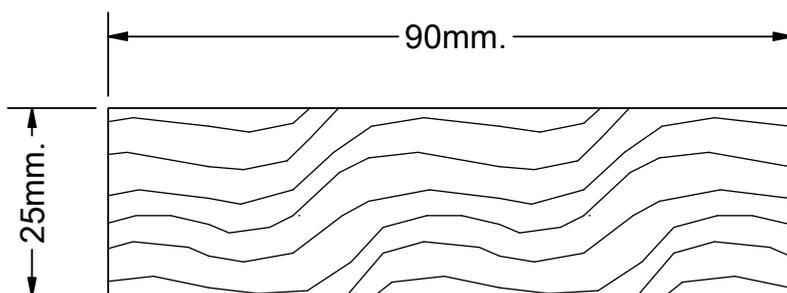


Rectangular Profile  
90x20 / 90x30 / 100x20

# Assembly


Thin lines indicate screw/nail Placement.  
Hatch indicates which piece is being added.

**1.**

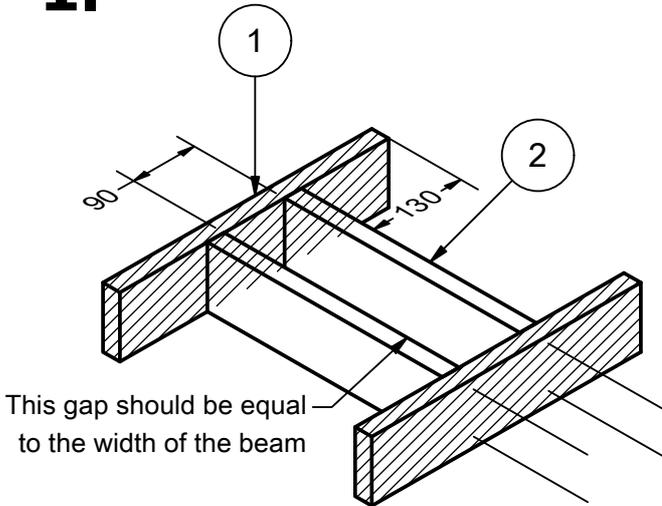


Repeat Process on both sides.



**2.**

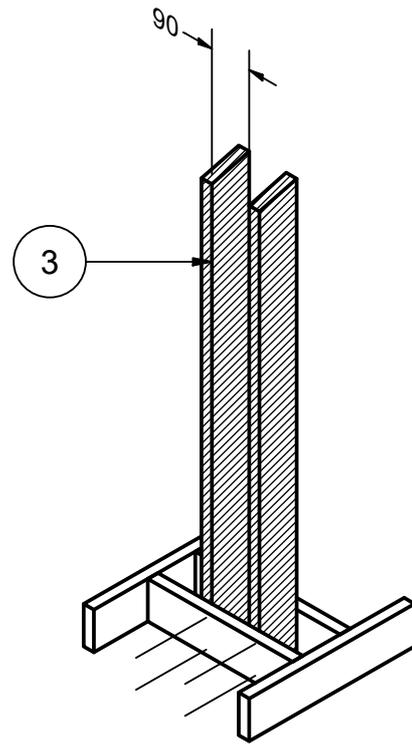

**3.**

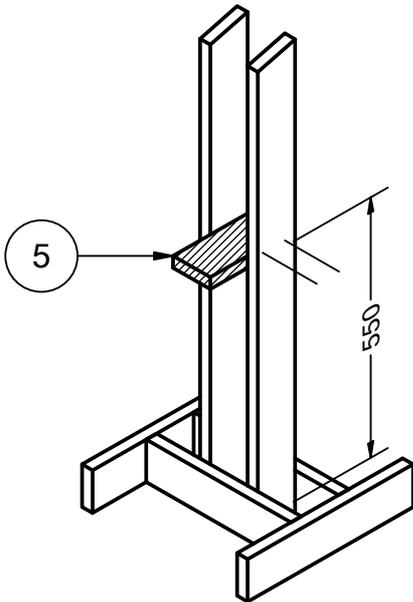


**4.**

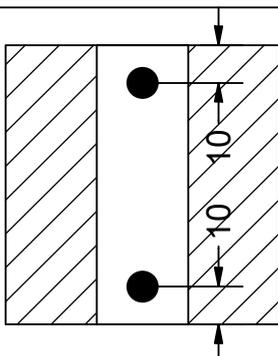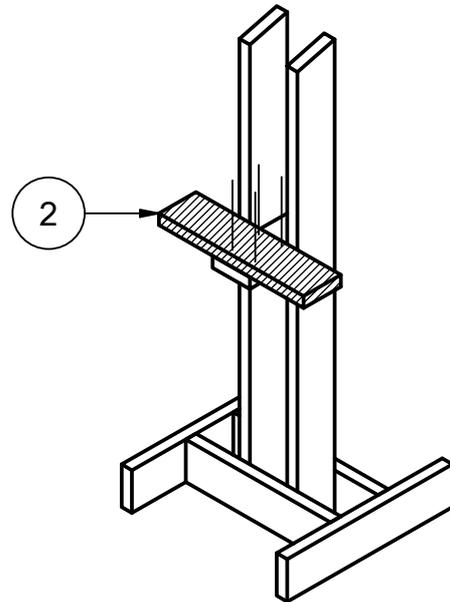

## Propper Nail / Screw placement

- Minimum 2 nails per joint
- At least 10 mm. from the edge
- Check the direction of the nail and avoid colliding with other nails.
- Attach Nail, from the thinnest part to the thickest (right)

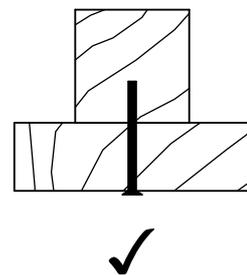


# Assembly

Thin lines indicate screw/nail Placement.

Hatch indicates which piece is being added.

**5.**

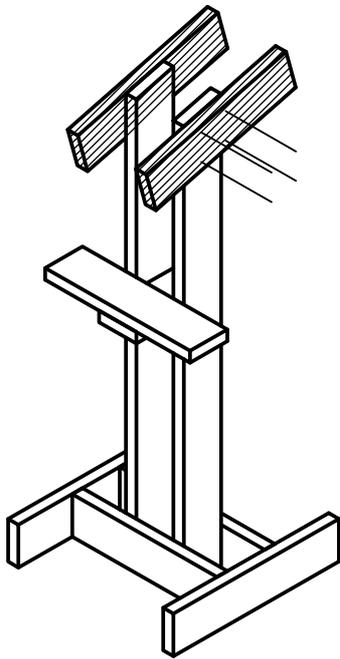

**6.**

